

# TAIWAN NO.1 ANTI-HUMIDITY TECH.

The leading brand for dry cabinets World Class Standard











- .Top MIT quality
- .Nearly 30 years manufacturing
- .With 8 times super dehumidifier










# What can the dry cabinet do for you?

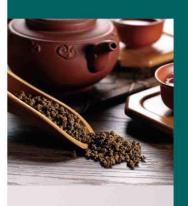

Many articles for daily use require anti humidity, such as clothes, accessories and jewelry, shoes, bags, 3C products, coffee, tea, medicine, album, roll film, camera, camera lens, and musical instruments. It has function of anti-bacterial, anti-oxidation, rust prevention, and dust mite prevention. Dry cabinet with multi-function can make your like healthier.

















# Contents


- 2 Small/Middle Size Dry Cabinet
- 4 Large Size Dry Cabinet
- 6 Dry Cabinet for Music Instrument
- 7 Wooden Style Dry Cabinet
- 8 Ultra Low Humidity Storage(1-20%RH)
- 10 Laboratory Drug Dry Storage
- 11 Professional and customized service
- 12 About us

# Comprehensive protection of anti-humidity, provide the most appropriate space for preserv

The two dehumidification methods with Physical adsorption and semiconductor microchip are adopted by EDRY. It is available to select the different components to assemble it depending on the request for anti-humidity. All of our products are made

in Taiwan. We have experience in production and marketing. Our technology is stable and safe, therefore, we got a favorable reception from the critics. To buy a right thing is more important than budget saved.

# Steps of selection of a proper anti-humidity cabinet.

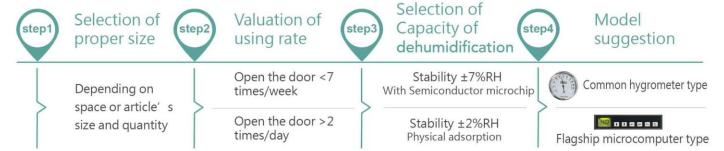

# **Humidity display**

# Common hygrometer type

With Japanese clock core, design for adjusting humidity without gear, hig sensitivity of reaction. Send to the thir party inspection institute for calibration, 6050 40 30%RH, the report showed that humidity is in tolerance range. Multiple control without any defects.

### Flagship microcomputer type

With LCD panel to provide the most stable control of humidity.

Calibrated by the third party inspection institute. It is stable and reliable. Humidity value can be controlled to be at ±2%RH. Easy operation.

## Common hygrometer type

The common hygrometer type is to dehumidify with the Physical adsorption principle, which is widely used for dehumidification throughout the world. The standard humidity value (40%RH) can be reached within 5 hours. The desiccating material is recyclable, and its dehumidification effect will be remained if power failure after plug it in for one hour. It cannot affect the preserved articles if the humidity value is within ±7%RH.

# Flagship microcomputer type

The Flagship microcomputer type can rapidly reduce humidity to be at standard value (40%RH) within 30 minutes. It is to dehumidify by means of semiconductor microchip principle. A patented design is original creation in the world. We made the breakthrough from traditional anti-humidity technology to create successfully the stable humidity environment, which is the safest and the most stable technology applied to anti-humidity. The humidity is exactly controlled to be about (±2%RH).

# Flagship series surpass other anti-humidity cabinet

EDRY Flagship series	Comparison items	Other Brands
<ul> <li>Only set up once, it can stably maintain the humidity for long-term period, and postpone the articles' life.</li> </ul>	Stability of preserving environment	It should regulate the humidity value depending on climate change.
<ul> <li>With 8 times super dehumidifier, even the articles contained more moisture, in wet environment, or open the door often, it can dehumidify easily, and quickly return to the set-up value.</li> </ul>	Rapid dehumidification	<ul> <li>In high wet condition, it should need several days or weeks to reduce humidity; open the door often can lessen the effect of dehumidification, and humidity is not easy to be reduced.</li> </ul>
<ul> <li>Start dehumidifying if humidity is over the set-up value, and stop dehumidifying if humidity is lower than the set-up value. It can be controlled the set- up value to be about ±2%RH.</li> <li>No crack or damage occurred if humidity is lower.</li> </ul>	Exactly control humidity	It cannot stop running if unplugged, or lower than the set-up value.

# Medium-small-size dry cabinet

# It's a home essential electronic product.



Hot Sales



Hot Sales



Hot Sales

Sr	pecification	Outside:H410xW340xD300mm
Item	Scomodion	Inside:H350xW335xD295mm Volume:34L Power:4W Steel shelves x1(Unadjustale)
reciti		Steel silelves x1(Olladjustale)

Outside:H440xW400xD410mm Inside:H375xW395xD400mm Volume:59L Power:4W Outside:H470xW400xD410mm Inside:H405xW395xD400mm Volume:64L Power:4W

	,				
Model Number	SD-48 (Black/White)	FD-60C	FD-60CA	FD-62C	FD-62CA
Grade	Common hygrometer type	Common hy	grometer type	Common hy	grometer type
Capacity	70%RH return to 40%RH in 5 hrs	70%RH return to 40%RH in 5 hrs		70%RH return to 40%RH in 5 hrs	
Adjustable shelves	X1 (fixed height)	X1	N/A	X1	N/A
Moving shelves (norma)	N/A	N/A	X1	N/A	X1
Activities wheels suite	Optional	Opt	ional	Opt	ional

Frequency of use: If you open door twice a day or more, we suggest you use Flagship series product. If not, you can use hygrometer series.

Moving shelves easy to pick and place



Adjustable shelves flexible available space





Hot Sales



Specification	Outside:H640xW400xD410mm Inside:H570xW395xD400mm Volume:90L Power:8W		xW400xD410mm /395xD400mm ower:6W	Outside:H890xW400xD410mm Inside:H815xW395xD400mm Volume:128L Power:8W
Model Number	FD-86A	FD-118C	FD-118CA	FD-126A
Grade	Flagship microcomputer type	Common hy	grometer type	Flagship microcomputer type
Capacity	70%RH return to 40%RH in 30 mins	70%RH return to 40%RH in 5 hrs		70%RH return to 40%RH in 30 mins
Adjustable shelves	X2	Х3	X2	X2
Moving shelves (norma)	X1	N/A	X1	X1
Activities wheels suite	Optional	Opti	onal	Optional

# Hot Sales

Outside:H525xW400xD410mm Inside:H460xW395xD400mm Volume:72L Power:4W



Outside:H570xW400xD410mm Inside:H500xW395xD400mm Volume:79L Power:8W



Outside:H595xW400xD410mm Inside:H530xW395xD400mm Volume:84L Power:4W



Outside:H455xW535xD410mm Inside:H390xW530xD400mm Volume:82L Power:4W

FD-70C	FD-70CA	FD-76A	FD-82C	FD-82CA	FD-82CW
Common h	ygrometer type	Flagship microcomputer type	Common hy	grometer type	Common hygrometer type
70%RH return	to 40%RH in 5 hrs	70%RH return to 40%RH in 30 mins	70%RH return t	o 40%RH in 5 hrs	70%RH return to 40%RH in 5 hrs
X2	X1	X1	Х3	X2	X1
N/A	X1	X1	N/A	X1	N/A
Ор	tional	Optional	Opt	ional	Optional

# Airtight movable



Outside:H570xW790xD400mm Inside:H490xW785xD390mm Volume:150L Power:8W



Outside:H1020xW400xD410mm Inside:H935xW395xD400mm Volume:147L Power:8W



Outside:H1290xW400xD475mm Inside:H1210xW395xD450mm Volume:215L Power:16W



Outside:H1230xW400xD410mm Inside:H1170xW395xD400mm Volume:185L Power:10W

FD-150W	FD-145C	FD-145CA	FD-196A	FD-200C	FD-200CA
Flagship microcomputer type	Common hy	grometer type	Flagship microcomputer type	Common hy	grometer type
70%RH return to 40%RH in 40 mins	70%RH return to	o 40%RH in 5 hrs	70%RH return to 40%RH in 40 mins	70%RH return to	40%RH in 5 hrs
X1	X4	X3	X4	X4	Х3
N/A	N/A	X1	N/A	N/A	X1
Optional	Opt	ional	Optional	Opt	ional

# Medium-large-size dry cabinet

# It can dehumidify all large articles at one time.





All series airtight doors can be modified without additional cost.







Add activities wheels suite M001680

Specification	Outside:H970xW590xD500mm Inside:H890xW580xD470mm Volume:243L Power:10W		
Model Number	D-250A	D-250	

Outside:H970xW880xD500mm Inside:H890xW870xD470mm Volume:365L Power:16W

item -	Volume.243L	Volume.243L Fower.10VV		16.303L1 OWE1.10W
Model Number	D-250A	D-250C	D-365A	D-365C
Grade	Flagship microcomputer type	Common hygrometer type	Flagship microcomputer type	Common hygrometer type
Capacity	70%RH return to 40%RH in 1 hrs	70%RH return to 40%RH in 5 hrs	70%RH return to 40%RH in 1 hrs	70%RH return to 40%RH in 5 hrs
Adjustable shelves (normal)	X3	X3	X3	X3
Up and down convection dehumidify	N/A	N/A	1 to 2	N/A
Activities wheels suite	Optional	Optional	Optional	Optional







Outside:H1350xW600xD660mm Inside:H1200xW590xD630mm Volume:450L Power:16W

Outside:H1950xW600xD660mm Inside:H1800xW590xD630mm Volume:680L Power:16W

Item		volume:450L Power:16W		volume:680L Power:16W
Model Number	D-450A	D-450C	D-680A	D-680C
Grade	Flagship microcomputer type	Common hygrometer type	Flagship microcomputer type	Common hygrometer type
Capacity	70%RH return to 40%RH in 1 hrs	70%RH return to 40%RH in 5 hrs	70%RH return to 40%RH in 1 hrs	70%RH return to 40%RH in 5 hrs
Adjustable shelves	Х3	X3	X5	X5
Up and down convection dehumidify	1 to 2	N/A	1 to 2	N/A
Activities wheels suite	Movable wheel	Movable wheel	Movable wheel	Movable wheel

Specification





Outside:H970xW1180xD500mm Inside:H890xW1168xD470mm Volume:490L Power:16W





Patented movable airtight column It is suitable for double doors





Outside:H970xW1400xD500mm Inside:H890xW1398xD470mm Volume:585L Power:24W

D-490A	D-490C	D-585A	D-585C
Flagship microcomputer type	Common hygrometer type	Flagship microcomputer type	Common hygrometer type
70%RH return to 40%RH in 1 hrs	70%RH return to 40%RH in 5 hrs	70%RH return to 40%RH in 1 hrs	70%RH return to 40%RH in 5 hrs
Х3	Х3	X3	Х3
1 to 2	N/A	1 to 2	N/A
Optional	Optional	Optional	Optional





### Airtight movable central Pillar

Outside:H1950xW1200xD660mm Inside:H1800xW1198xD630mm Volume:1360L Power:32W

This model can customize 4 doors type

Flagship microcomputer type
With LCD panel to provide the most stable control of humidity.


Calibrated by the third party inspection institute. It is stable and reliable. Humidity value can be controlled to be at ±2%RH. Easy operation.

# D-1336A D-1336C Flagship microcomputer type 70%RH return to 40%RH in 1 hrs X5 X5 1 to 4 Movable wheel D-1336C Common hygrometer type 70%RH return to 40%RH in 5 hrs X5 M/A

Common hygrometer type
With Japanese clock core, design for
adjusting humidity without gear, hig
sensitivity of reaction. Send to the thir
party inspection institute for calibration, 60 50 40
30%RH, the report showed that humidity is in tolerance
range. Multiple control without any defects.

# Music instruments dry cabinet

This is the most popular one in global and is a recommended one for all players of guitar and violin.




Central mounting and anti-slippery beam



bars







The columns at the four sides have collision-proof/scratch-proof strips.

Specification	Outside:H1290xW400XD475mm Inside:H1210xW395xD450mm Volume:215L
Model Number	FD-215AG
Grade	Flagship microcomputer type
Capacity	70%RH return to 50%RH in 40 mins
Hanging number of guitar	2 classical guitar or 4 electric guitars
Neck fixing plate	X4set
Activities wheels suite	Optional









			•
Specification	Outside:H890xW400x410mm Inside:H815xW395x400mm Volume:128L Power:8W	Outside:H970xW590xD500mm Inside:H890xW580xD470mm Volume:243L Power:10W	Outside:H1750xW600xD660mm (Including wheel height) Inside:H1550xW590xD630mm
Model Number	FD-126AV	D-206AV	D-600AV
Grade	Flagship microcomputer type	Flagship microcomputer type	Flagship microcomputer type
Capacity	70%RH return to 50%RH in 30 mins	70%RH return to 50%RH in 1 hrs	70%RH return to 50%RH in 2 hrs
Adjustable shelves	X1	N/A	X1
Hanging number of Violin	X2	X4	HERCULES professional cello tripod X1
Activities wheels suite	Optional	Optional	Movable wheel

# Household Woodenstyle dry cabinet

This is professional handmade and painting with wooden style, and with super steel & plate.







Specification	Outside:H570xW400xD410mm
Sp. 505	Inside:H500xW395xD400mm
	Volume:79L Power:8W

Outside:H890xW400xD410mm Inside:H815xW395xD400mm Volume:128L Power:8W

Outside:H970xW880xD500mm Inside:H890xW870xD470mm Volume:365L Power:16W

Item	Volume:79L Power:8W	Volume:128L Power:8W	Volume:365L Power:16W
Model Number	WD-76A	WD-126A	WD-306A
Grade	Flagship microcomputer type	Flagship microcomputer type	Flagship microcomputer type
Capacity	70%RH return to 40%RH in 30 mins	70%RH return to 40%RH in 30 mins	70%RH return to 40%RH in 1 hrs
Adjustable shelves	X2	X2	X3
Moving shelves	X1	X1	N/A
Cabinet material	Steel board wood grain	Steel board wood grain	Steel board wood grain

It has large space for collecting easily and has the ability of purification and removing peculiar smell.

The product has air filtering circulation system with patented, and has function of antidust and bugs, adjust humidity automatically, control humidity preciously, offer better and healthier air in house, simple design of cabinet, and easy to collection.



It is suitable for all home articles, such as shoes, clothes, and bags.

Filtration

Dehumidification





Specification	Outside:H1260xW810xD424mm Inside:H1120xW780xD380mm Volume:330L	Outside:H1745xW810xD424mm Inside:H1620xW780xD380mm Volume:480L	Outside:H1760xW900xD670mm Inside:H1695xW897xD642mm Volume:967L Moisture-proof wardrobe
Model Number	SH-390 (White Oak/ Walnut wood)	SH-540 (White Oak/ Walnut wood)	WD-1000A
Grade	Flagship Pointer type	Flagship Pointer type	Flagship microcomputer type
Capacity	40%RH-50%RH	40%RH-50%RH	70%RH return to 40%RH in 1 hrs
Adjustable shelves	X3	X5	X1
Cabinet material	Superior recombined wood board	Superior recombined wood board	Steel board wood grain

# **Ultra Low Humidity** Storage(1-20%RH)

It is a global unique patent and a most recommended Taiwan made product among the electronic factories.



Outside:H890xW400xD410mm Inside:H815xW395xD400mm Volume:128L Activities wheels suite



Outside:H970xW590xD500mm Inside:H890xW580xD470mm Volume:243L Activities wheels suite



Outside:H970xW880xD500mm Inside:H890xW870xD470mm Volume:365L Activities wheels suite

Model Number	SL-126CA	SL-250CA	SL-365CA
Adjustable shelves	X3	Х3	X3

### EDRY' s patented movable airtight column



Specification

Item

EDRY's patented airtight activity column allows items moisture-proof cabinet with a larger width can to be easily stored.



Usually the double-door will have a center column because of some airtightness considerations, but this design is not good for storing large items.



The strengthened steel board has a durable and solid structure.



You can open either the left or the right door panel.



Super fast recovery time within 5mins. EDRY's ultralow dry cabinet (10% RH or below) is completely manufactured according to the standards of IPC/JEDEC J-STD-033 for managing the IC integrated circuit.

New patent: it can dehumidify without using nitrogen gas, compressor, and hightemperature baking











# Optional accessories

The antistatic paint 106~ 109Ω Surface resistance value)

The antistatic glass

The antistatic wheels suite x4 Electrostatic ground wire

Specification	Outside:H1350xW600xD660mm Inside:H1200xW590xD630mm Volume:450L Activities wheels suite	Outside:H1950xW600xD660mm Inside:H1800xW590xD630mm Volume:680L Activities wheels suite	Outside:H1950xW1200xD660mm Inside:H1800xW1198xD630mm Volume:1360L Activities wheels suite
Model Number	SL-450CA	SL-680CA	SL-1336CA
Adjustable shelves	X3	X5	X5



OutsideH970xW1180xD500mm Inside:H890xW1168xD470mm Volume490L



OutsideH970xW1400xD500mm Inside:H890xW1398xD470mm Volume585L

SL-490CA	SL-585CA
X3	Х3

### Extreme Speed Desiccating Performance

Industrial desiccating and moisture prevention must be fast. After opening the door for 30 second and the and stable. EDRY leads the world to launch the extreme speed desiccating ultra low humidity main desiccating unit to lower the humidity level to less than 10% within 5 minutes and maintain stable 1%RH lowest humidity level in long period of time. One hour after power up, even with power interruption, it will maintain less than 15%RH humidity level in a period of 24 hours. It can completely replace nitrogen



filling and other dry air equipment.

Filled with nitrogen gas control equipment



Optional accessories for load weight shelves



Resistance, heavySpecial steel shelves, can load more than 200kg rack shelves (Optional)

### Ultra-low humidity cabinet: Ultra-fast humidity returning test

humidity can drop back to 10%RH within 5 minutes.

Test model SL-1336CA



The environment has a humidity of 55%RH, a temperature between 25 to 37 °C, and the test is to open the door for 30 seconds to test the humidity return speed. Depending on external temperature changes, test results may vary.

Recovery time	Model Number	Durability of The Dehumidification Core (Under the Condition That the Door Is closed.)	Frequency of Door Opening/Closing	Lowest Humidity Level (RH)	Scope of Application
Return to 10%RH or below in 5 minutes	SL series	Duration for maintaining the RH: The result can last for more than 70 hrs.	Once every 20 to 30 minutes (Frequent door opening, such as more than 5 times in a day)	level can be	Moisture-proof management for a MSD element assembly site with a high door opening/closing frequency     No high temperature baking; high-moisture level items' moisture-proof management
Return to 10%RH or below in 15 minutes	ML series	Duration for maintaining the RH: The result can last for more than 46 hrs.	Once every 40 to 90 minutes (Frequent door opening, such as more than 3 times in a day)	and the level can	1.Moisture-proof management for a general MSD element assembly site
Return to 10%RH or below in 30 minutes		Duration for maintaining the RH: The result can last for more than 26 hrs.	Once every 90 to 180 hrs (The door is opened no more than twice a day)	be maintained for a long time.	Moisture-proof management for a MSD element assembly site with a low door opening/closing frequency     Long-term low-moisture MSD elements moisture-proof storage

# Laboratory Drug Dry Cabinet

This is for air filtering, anti-shock, anti-moist, and complies with public safety standard and also for using in laboratory.

Description of applied articles. The chemical drugs have volatility, corrosive, peculiar smell, irritating, and strong acid and alkali








Specification		80xW600xD660mm W598xD630mm eels suite		5xW600xD660mm kW598xD630mm els suite		xW1200xD660mm V1198xD630mm Is suite
Model Number	A-370	AD-370	A-600	AD-600	A-1200	AD-1200
Purify	<b>V</b>	✓	<b>V</b>	✓	<b>V</b>	<b>V</b>
Dehumidification	N/A	✓	N/A	✓	N/A	<b>V</b>
Moving shelves	>	(3	>	(4	)	(8

The whole series of laboratory drug storage cabinet uses SUS #304 stainless steel with an acid and alkaline resistant powder coating.

- There is a design preventing the drawers detaching from the slide rail
- Collision-proof for the stored drugs:Two at each of the front and back;One at each of the left and right; Adjustable dividers

 Adjustable anti-shock button suckers for the floor

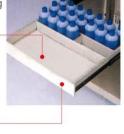



- The drug cabinet has a built-in 24-hr exhaustpurification system.
- There is a special internal circulation and purification system that need no connection to an external exhaust pipeline and create no exhaust emission or environmental pollution.
- 3. There is a special pressure difference sensing for determining the use condition of filters.
- 4. There are multiple types of absorption filters.
- 5. There is a multi-blade noise-free fan to prevent the motor from idling.
- 6. The cabinet is fully airtight so no leak of bad odor.
- 7. The drawer-type top/bottom adjustable traysprovide flexible space.



# Professional and customized service

Professional and customized service-made in Taiwan, customized, and solve all problems from every articles.

1	2	3
4	5	6

- 1. S-002 Book Shelves (Steel made)
- 2. S-006 Anti-humidity security box.
- 3. S-009 Cabinet for taxidermy
- 4. S-019 Showcase for big painting (Steel made)
- 5. S-018 Showcase for artifacts (wooden made)
- 6. S-017 Showcase for artifacts (wooden made)



## Global Marketing

China, Hong Kong, Macau, Malaysia, Singapore, Thailand, Sydney, Australia, India, the Philippines, Canada, the United States, Russia, Moscow, Vitnam, Spain and Israel.



















**Panasonic** 



# We have been in the business of manufacturing dry cabinets for 30 years and have built the reliable Taiwan brand in the world.

As a professional anti-humidity products business, we established in 1987 and have 30 years' manufacturing experiences. Our

earn more trust and respect from customers and be thankful to our customers for having such opportunity to offer our services.

concept is profession, responsibility and trust, we try to reach top level in the world. We also try to serve our customers with thanks to offer them safe and good products. Our products are safe, healthy, qualified, and have reasonable price. We won't have false and deceptive advertising, on the other hand, we try to improve and innovate to











# 100% made in Taiwan and excellent quality.

EDRY Co., Ltd is the largest manufacture of dry cabinet in Taiwan. We have competed ability and reasonable price with good products quality, function, service and reputation. We also have good relationship with our partners. For our agents, we offer better after-sales services. The machine can be disassembled easily. The accessories and spare parts are guaranteed for having good maintenance service. In the past, we faced a big scale of industrial transfer and the low price strategy from China, but we insist on quality so we stay in Taiwan to make effort on our products. We decided to produce good cabinets and provide our customers with good services.

# We insist on using green environmental materials.

For giving our customers a safe and qualified products, we make products with safe, reliable, and environmental materials. All plastic materials such as circuit board, control box, door frame, and doormat must be examined by SGS. The environmental materials exclude lead, mercury, chromium, cadmium, and hexavalent chrome which are poisonous for human. As well as quality control, we have strict requirement on materials to have safe and qualified products.

# The most long service life of components in the world

Our components have long service life for over 20 years. Many customers have used our products for 15



years without any reparation. They still recommend our products to other friends.



# Our factory is certified with international certification.

The operation procedure is made in accordance with ISO 9001 and CE certification. Besides, we have professional humidity testing and patented technique. We are famous in marking overseas.



CONTRACTOR IN CO	W 30 IN WY TO TO		Industries Charefurfice:  MY 0 SC H SIC H
H CONTRACTOR	(器校正报告書	milita	Certificate of Test
(中) 内侧军机行而理公司 (中) 白申請人里可能上格目	um of	-	0
Appenie	p-2011 N K	0.00	Certificate of Test
ON HAIL	The same of the sa	- March	HE BERKEERSHYTHER
1.875 N. 1676	日本日本 2017-774 東京日本日本 日本日本 日本日本	10 15	Compliant to appropriate
144844 2 2	Date Statement		SETT CO. ALL ST. SETT CO. SETTING AND SETTING AND SETTING AND SETTING.
ARTHABUSE No.	NAME OF STREET	0 m 0 mm 51 (0 m 25)	Autor
N. S. W. STRANG.	SECRET STEELINGS WALKER	2000/18/1 2001/18/17 2001/18/17	BANDONIAN TRACTIC CONTRACTOR SEALER AND ADMINISTRAÇÃO
CHICA PERCHAMIC WELLOW AND SALES	DOC MANUFACTURE ADMINISTRACE COMMON	196/367	"
		- 1	(6
			THE RESPECTAL ASSESSMENT AND SET OF THE PROPERTY AND ASSESSMENT ASSESSMENT.
	gas bures and Record for	Constructor	EX 200 x 7 June Ex 200 x 7 Per 3 x 600 12 June, Ex 200 Aug y years out 200 x 12 June Ex 200 x 7 Per 3 x 600 x 10 June.
S St. E. St.	<b>在工业技术化工业内</b>	2004/19/21	
rrections	THE STREET OF CH.	2364-3127 2366-377	EX 42000-0-2 2007 EX 42000-0-7 AMO EX 42000-0-7 AMO EX 42000-0-7 Subset 18 Extension and 2005 EX 42000-0-15 (2005)
THE EMPLOYED HEMPOTY			AN AMENDED BY DESIGNATE STANDARD AND APPEAR AND ADDRESS AND ADDRESS OF THE PROPERTY OF THE PARTY
			Name of Enhances - Months -
	many indept for the TON SHAP TOTAL PART HAT THE ATTENDED TO THE ATTENDED TO THE PART HAT THE ATTENDED TO T	na situ sarinus.	No Lamana 136, No. 148, Nov. 11 Md. Chang-No City, Salpat Miles. Names a. R.O.C. Sone Sing.: Aug. 15, 2047
CACL IN 17th Tensory Springs that the expen- try Standards condition parties and nation of the Standards condition (Sept. 17th J. 180.)	many locally figures may bear compared with may all have also bear that he had not all the property and a CSM, laber through the incompared with 100000 a CSM, laber through the incompared with 100000 a Vivi 4, 200 A 2 100 A 2 B final A 1 4 1 1 1 1 1 1 1	11521	Attended by
ADMASTRAL CARREST	本では、他のであったのである。 本では他のである。 本では他のである。 本では他のである。 本ではないではないである。 本ではないではないである。 本ではないである。 本ではないである。 本ではないである。 本ではないである。 本ではないである。 本ではないではないではないではないではないではないではないではないではないではない	224101	0-0
90 to (ap. 4 s.s.)	Deat ManagerCat. Hans: 122	- 1	the reference that are in appearance or you all second or to concern a
	Out Mander to seed 17	- 1	the matter of the property of the property of the second of the observed of the second

NSF International Strategic Registrations, Ltd.

Certificate of Registration
The certain for County November System of
SATV CO., LTD.

ISO 9001:2000





# Prevent moisture well, the Earth more beautifull

Daily life, because wet conditions, resulting in such as electronic equipment, leather , materials, food, musical instruments ... and so on, damp and moldy erosion damage is discarded, not just a waste of resources, but also cause environmental pollution, the earth bear it big burden.

EDRY has long attached great importance to environmental protection, uphold corporate social responsibility, research and development of high-tech wafer dehumidifier, professional and technical dehumidifier moisture fast, energy saving, no air pollution, reduce damage for doing good anti-humidity, for the earth to make environmental protection an effort.